

**PURE IP™ READER CONTROLLER  
QUICK NETWORK CONNECTION INSTRUCTIONS  
MODELS: RC-04 ALL MODELS**

Questions? Scan our QR code or visit  
[www.isonas.com/support/installFAQ](http://www.isonas.com/support/installFAQ)




**\*\*Before starting please confirm the following items\*\***

- Download the latest ISONAS Configuration Tool from [www.isonas.com](http://www.isonas.com) and go to Quick Links in the upper right hand corner.
- The RC-04 functions best when configured to use DHCP (factory default). Please check with your Network Administrator to ensure DHCP is available and if possible use DHCP reservations.
- The default for the RC-04 is DHCP and Client Mode set to [isonaspureaccesscloud.com](http://isonaspureaccesscloud.com) if this is the configuration needed ***no further changes to the device are needed!***
- When connecting Pure IP™ devices to Pure Access™ Cloud ensure that port 55533 is open outbound to ensure the Pure IP™ device can connect

**Step 1**


Run the Configuration Tool and click on the **Discover Units** button

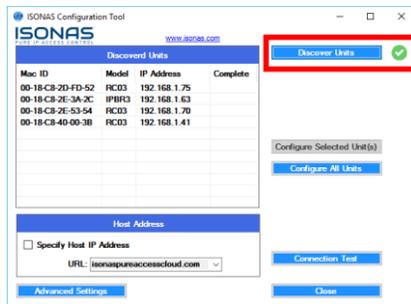

**Step 2**


To assign static addresses to the devices click on the **Advanced Settings** button. This will expand the window and offer more options (see below).

1. Type in the IP address, Subnet and Gateway in the appropriate field. *Note that static addresses can only be assigned one unit at a time.*
2. Ensure the unit is set in Client Mode, the correct URL is set (or Host IP for Pure Access) and a valid DNS address is present. The default is 8.8.4.4 which is free Google DNS.
3. Highlight the unit to be configured and click on the **Configure Selected Unit(s)** button (see below).

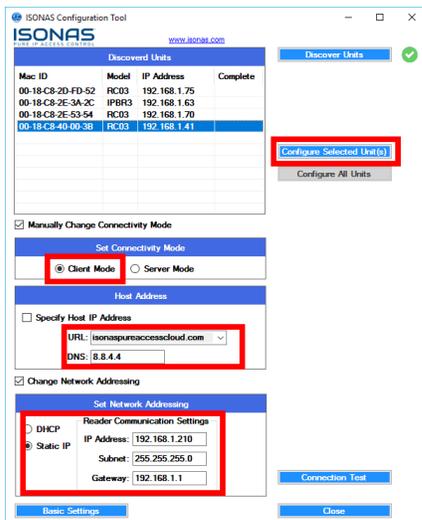

**Step 3**

When using Pure Access™ Manager the address of the Host will change. Where it says  **Specify Host IP Address** place a check mark in the box and enter the IP of the Host (see below).

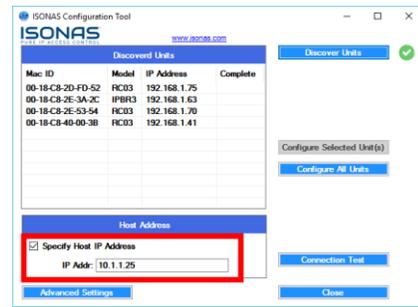

**Step 4**

Add the device to Pure Access™ using the steps below. *If you experience issues please scan the QR Code above for additional resources or see the network insert for best practices.*

1. Log into your Pure Access™ instance via a web browser
2. Click on the **Access Control** tab at the top and then click on the **Access Points** tab below that.
3. Click on the **+** icon to add the RC-04 to the system.
4. Type in the MAC address of the RC-04 and either tab to the next field or left click in the Access Point Name field. The device should now show **Ready, Device Connected** above the MAC address field.
5. Enter in the Access Point Name and continue on with the configuration wizard.

